 


## ALL STAR ELECTRIC BARBECUE

 
MODEL 19659160 & 19659160A1

Product Guide

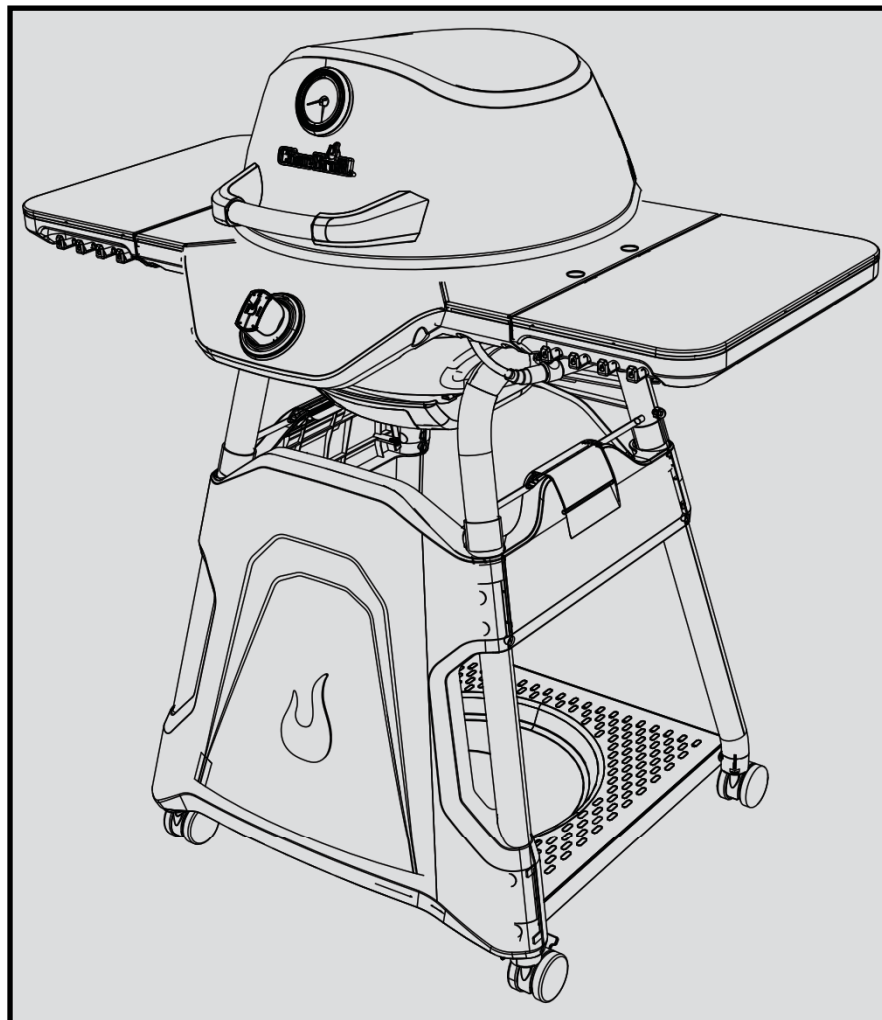

GB Operating Instructions  
Assembly Instructions



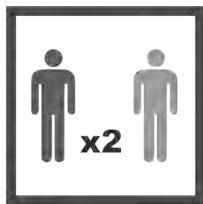


(GB)

Assemble your grill on a level, protective surface to prevent damage to the unit. To maintain the finish and protect your front panel from damage, use a blanket or soft protective pad. For ease of product removal, cut all 4 corners with a utility knife and allow the carton panels to lay flat, as shown. Wear protective gloves while cutting the carton.

(RO)

 Pentru a preîntâmpina orice probleme care pot afecta grătarul, asamblarea grătarului trebuie efectuată pe o suprafață protectoare plană. Pentru a proteja finisajul și panoul frontal, folosiți o pătură sau o bucată de material moale. Pentru a scoate mai ușor produsul din ambalaj, tăiați toate cele 4 colțuri cu un cutter și culcați pereții de carton așa cum se arată în imagine. Nu uitați să folosiți mănuși de protecție atunci când tăiați cutia!

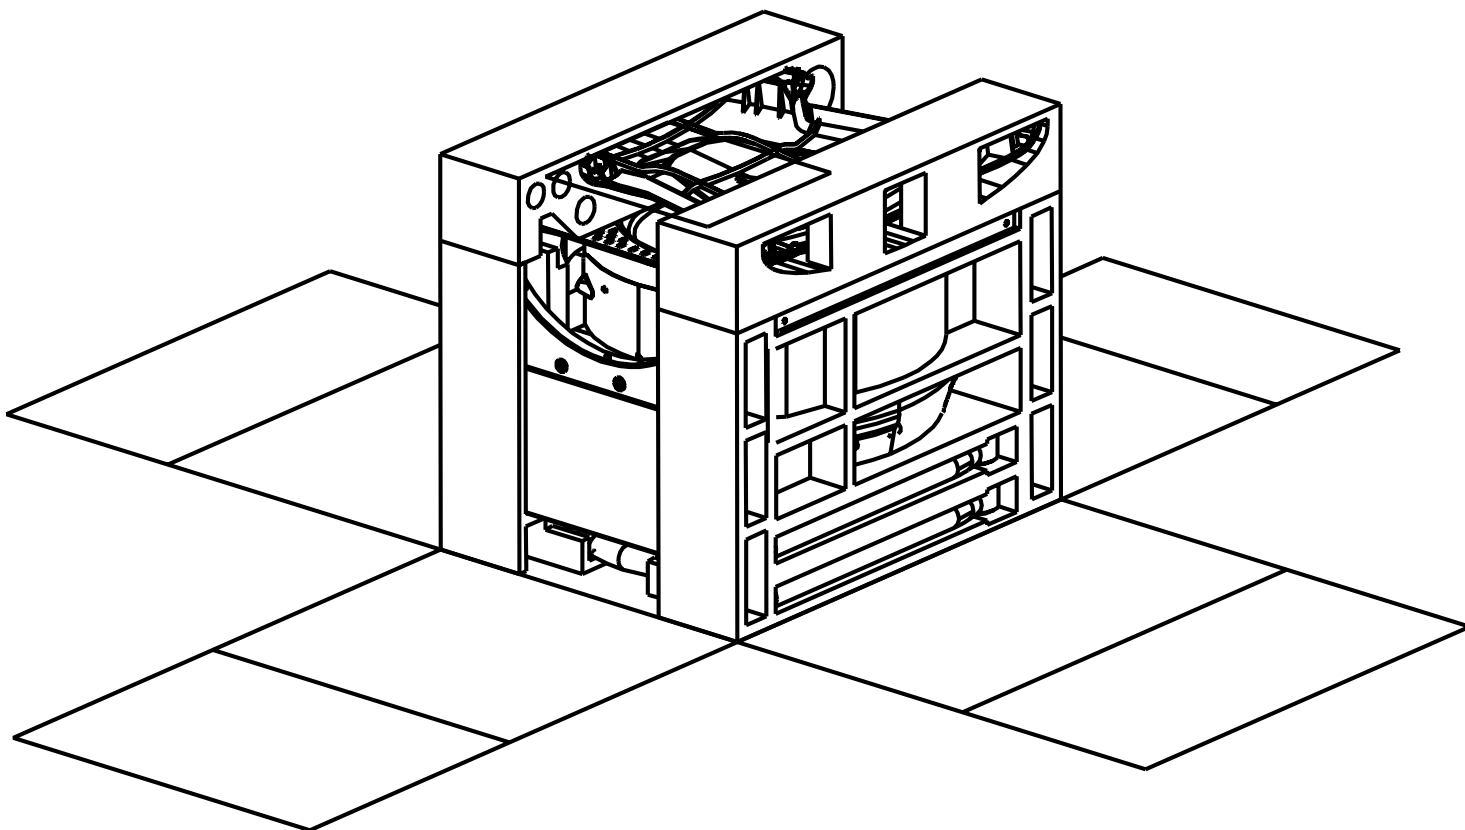




# IMPORTANT SAFETY INFORMATION

**THIS BARBECUE IS FOR OUTDOOR USE ONLY**

## SAFETY SYMBOLS


DANGER, WARNING, and CAUTION statements are used throughout this Owner's Manual to emphasize critical and important information. Read and follow these statements to help ensure safety and prevent property damage.

The statements are defined below.

	<b>CAUTION</b>
CAUTION: Indicates a potentially hazardous situation or unsafe practice which, if not avoided, may result in minor or moderate injury.	
	<b>WARNING</b>
WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.	
	<b>DANGER</b>
DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.	

### FOR OUTDOOR USE ONLY

1. For outdoor use only.
2. Do not use indoors or for commercial cooking.
3. Use appliance only in well-ventilated space.

	<b>WARNING</b>
1. Do not store or use petrol or other flammable liquids or vapors in the vicinity of this or any other barbecue.	

### INSTALLER/ASSEMBLER:

Leave this manual with consumer.

### CONSUMER:

Keep this manual for future reference.

It is the responsibility of the assembler/owner to assemble, install and maintain barbecue.

### Questions:

If you have questions during assembly or use of this barbecue contact your local dealer.

# FOR YOUR SAFETY - BEFORE USING YOUR BARBECUE



## WARNING

- This instruction manual contains important information necessary for the safe use of the appliance.
- Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook. Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.
- This appliance complies with technical standards and safety requirements for electrical appliances.

### ELECTRIC SHOCK POSSIBLE

- This appliance is rated for: 220-230 Volts - 50-60HZ, Power Output 2200 W
- Connect only to socket-outlet having an earthing ground and protected by circuit breaker with a rated fault operating current (RCD) having a maximum rating of 30 mA. Regularly inspect power cord sign of damage or wear. Do not use if cord is damaged. Supply cord must be replaced by a special cord or assembly available for the manufacturer or its service agent.
- Replace damaged part(s) only with Char-Broil supplied replacement parts. Do not attempt to repair damaged parts.
- In case of fire turn controller to OFF position, unplug barbecue from outlet and allow fire to burn out. Do not use water to put out a fire in this or another electrical appliance.
- To avoid the possibility of burns be sure barbecue is cool before removing and/or cleaning electric controller and heating element. Do not modify this product.
- Use appliance only as specified in this manual.
- Do not use in a traffic area where tripping over the cord is possible.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if



## WARNING

they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by Children without supervision.
- This barbecue is not intended for and should never be used as a heater.
- **Apartment Dwellers:** Check with management to learn the requirements and fire codes for using an gas barbecue in your apartment complex. If allowed, use outside on the ground floor with a 60 cm clearance from walls or rails. Do not use on or under balconies.

 
### SAVE THESE INSTRUCTIONS

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

### READ ALL INSTRUCTIONS

- Do not touch hot surfaces with unprotected hands. Use handles and knobs provided for operation.
- To protect against electrical shock, do not immerse cord, plugs, controller or heating element in water or any other liquid.
- Do not leave appliance unattended.
- Close supervision is necessary when any appliance is used by or near children. Keep children and pets away from the appliance at all times.
- This appliance is not a toy.
- Never leave barbecue unattended when ON.
- Unplug from outlet when not in use and before moving or cleaning.
- Allow to cool before putting on or taking off parts.

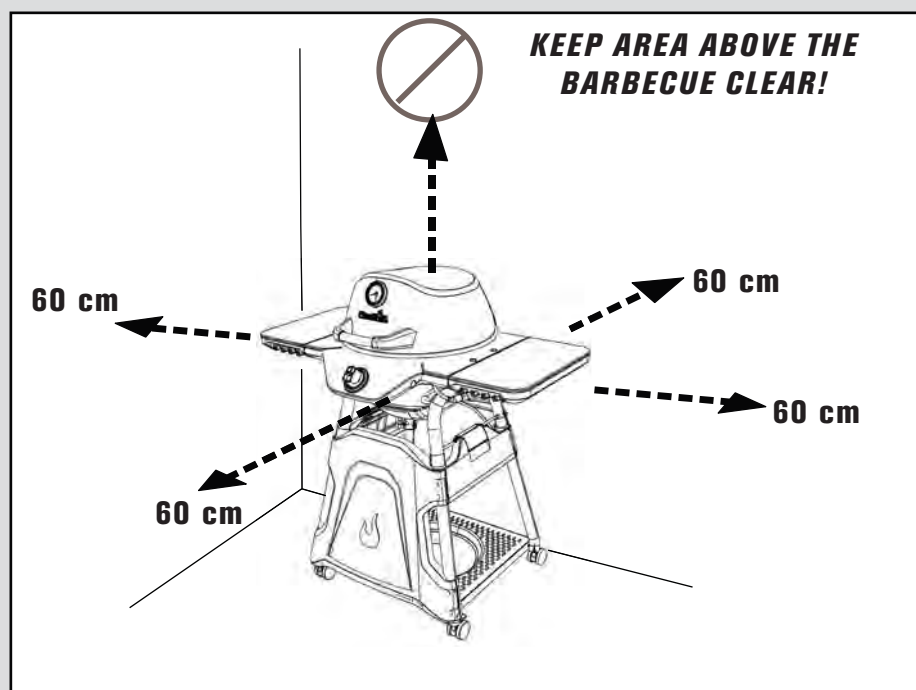

# FOR YOUR SAFETY - BEFORE USING YOUR BARBECUE

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Use only accessory attachments recommended by manufacturer.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not use appliance for other than intended use. This appliance is not intended for and should never be used as a heater.
- To prevent barbecue from being splashed or falling into water, do not use barbecue within 3 meters of a pool, pond or other body of water.
- Keep barbecue and electric controller dry and out of rain at all times.
- Keep electric plugs off ground and dry.
- Do not use water or other liquid spray to clean product without first unplugging electric controller and removing heating element.
- **DO NOT USE CHARCOAL.** A charcoal fire will result and the barbecue is not designed for charcoal. The fire will create an unsafe condition and damage the barbecue.
- **WARNING:** Charcoal or similar combustible fuels must not be used with this appliance;
- Fuel, such as charcoal briquettes, is not to be used with appliance or any other liquid.
- This appliance will be hot during and after use. Use insulated oven mitts or gloves and long-handled barbecue utensils for protection from hot surfaces or splatter from cooking liquids.
- Do not use or store gasoline, kerosene or other flammable liquids within 7 meters of this barbecue when in use. Keep appliance area clear and free from materials that burn.
- Do not move the appliance when in use.
- When cooking, the appliance must be on a level, stable surface in an area clear of combustible material.
- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- To avoid electrical shock disconnect electric cord and remove electric controller before removing heating element and cleaning barbecue. Never immerse electric controller or heating element

in any liquid.

- Don't immerse the appliance in water for cleaning
- Do not use this appliance on the same circuit as other high powered appliances.



## CAUTION

- Putting out grease fires by closing the lid is not possible. This appliance is well ventilated for safety reasons.
- Do not leave appliance unattended while burning off food residue. If appliance has not been regularly cleaned, a grease fire can occur that may damage the product.

 
## Extension Cord Use and Safety

- For best barbecue performance use of extension cord is not recommended.

### For your safety - If you must use an extension cord:

- Use only outdoor type cord rated for 10 amperes.
- Use the shortest length extension cord required. Do not connect 2 or more extension cords together.
- Keep connections dry and off ground.
- Do not let cord hang over edge of table top or other items where it can be pulled by children or tripped over.

This product must not be disposed together with domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

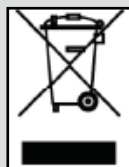

# FOR YOUR SAFETY - OPERATING YOUR BARBECUE

## USE AND CARE OF YOUR BARBECUE

### Before first use of barbecue:

- Remove all packaging and sale labels from the barbecue. Do not use sharp tools to remove stickers.
- Wash cooking grate with warm soapy water, rinse and dry thoroughly.

### Before each use of barbecue:

- Use barbecue only on a firm and level surface to prevent tipping over.
- To prevent household circuit breakers from tripping, keep electric controller dry and do not use other electrical products on the same circuit.
- Check grease tray to make sure it is empty and is mounted under the drain hole.
- For stick-free cooking, apply a thorough coating of vegetable oil or vegetable oil based spray to the cooking grate.

### Turn barbecue on:

 
- Ensure electrical controller is turned fully counterclockwise to the off position.
- Plug power supply cord into a properly grounded, RCB protected outlet. If extension cord must be used refer to "Extension Cord Use and Safety". Turn knob clockwise. Indicator light should come on.

### Preheating the barbecue:

- Keep lid closed.
- Preheat for searing, 15-20 minutes with controller set to ⑤ (See illustration below)
- The heating element in your grill will turn off after 3 hours of continuous use to protect the part; but the light ring will remain illuminated reminding you to unplug the grill. If you want to use the grill for more than 3 hours, you will need to rotate the control knob to the ○ (OFF) position, unplug the grill and plug the grill back in to continue.
- To select heat setting, align pointer on control knob the appropriate number on the control knob bezel. 1 for Low; 5 for High.

### Turn barbecue Off:

- Turn controller knob fully counterclockwise to ○ (OFF) position.
- Unplug cord from outlet.

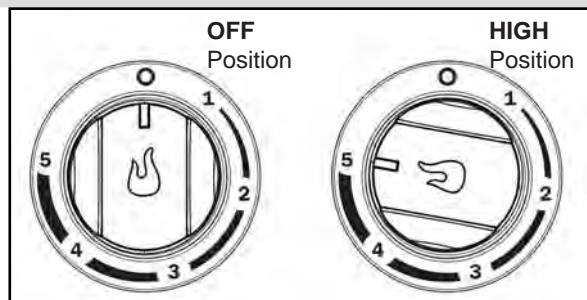

### Barbecuing:

- For best results, cook with the lid closed to hold in heat and provide complete cooking.
- Temperature gauge on the lid indicates approximate cooking temperature inside the barbecue.
- Controller setting for various foods are dependant upon outdoor conditions and personal cooking preferences.
- The grease tray must be inserted into appliance and emptied after each use.
- Clean barbecue often, preferably after each cookout. If a bristle brush is used to clean any of the barbecue cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to barbecuing. It is not recommended to clean cooking surfaces while barbecue is hot.

### Controlling grease fires:

- To aid in controlling grease fires use the following precautions:
- Keep barbecue free from grease; chance of fire is greatly increased by grease buildup.
- Trim excess fat off meat and use less fatty cuts of meat to reduce chance of grease fires.
- If flare-up occurs during cooking reduce controller setting and close lid.
- If flare-up continues turn controller to ○ (OFF) position and unplug the power cord. Clean the porcelain bowl under the heating element at least once a season, more often with heavy use.

### Cleaning your barbecue:

- Excess build up of burned grease and food particles will reduce the barbecue's cooking performance. To obtain optimum performance.
- Clean the porcelain bowl and frame at least once a season, more often with heavy use.
- Using a mild detergent or hot soapy water, moderately scrub surface of the lower porcelain bowl with a plastic or brass bristle brush.
- Clean cooking grates regularly with warm soapy water or a baking soda and water solution. Use non-abrasive scouring powder for stubborn stains. If a bristle brush is used to clean any of the barbecue cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to barbecuing. It is not recommended to clean cooking surfaces while barbecue is hot.
- Clean porcelain lid and body with a non-abrasive cleaner.
- Do not use abrasive oven cleaners, steel wool or metal brushes to clean porcelain grates or barbecue body. They will damage the finish.
- Do not use sharp or pointed tools to clean barbecue.

### Cleaning the heating element bracket:

- The element bracket may be cleaned with a damp cloth using a mild detergent or hot soapy water.
- Dry electrical controller and heating element before use.

### Storing your Barbecue:

- Clean cooking grate.
- Store barbecue in weather protected area or under barbecue cover when not in use.

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	PREVENTION / SOLUTION
Barbecue not heating	<ul style="list-style-type: none"> <li>Controller turned to OFF position.</li> <li>No power.</li> <li>Faulty controller or heating element.</li> </ul>	<ul style="list-style-type: none"> <li>Turn controller knob to setting ⑤ HIGH..</li> <li>Check for tripped household circuit breakers or RCB Reset or replace if necessary.</li> <li>Try a known, working appliance in the outlet.</li> <li>Try a different outlet, preferably on a different circuit.</li> <li>Replace controller or heating element.</li> </ul>
Circuit breaker trips or fuse blows	<ul style="list-style-type: none"> <li>Power surge.</li> <li>Another appliance plugged into same circuit as barbecue.</li> <li>Moisture or water in controller or electrical connections.</li> <li>Damaged cord or electrical connections.</li> </ul>	<ul style="list-style-type: none"> <li>Turn controller to OFF position before plugging into electrical outlet.</li> <li>Do not use other electrical appliances on the same circuit.</li> <li>Keep controller and all electrical connections dry. Do not operate unit when raining.</li> <li>Replace damaged controller or extension cord.</li> </ul>
Barbecue will not cook properly	<ul style="list-style-type: none"> <li>Lid of barbecue is left open.</li> <li>Insufficient preheat or temperature set too low.</li> <li>Inappropriate extension cord.</li> <li>Excessive buildup on porcelain bowl.</li> </ul>	<ul style="list-style-type: none"> <li>Close lid on barbecue while cooking.</li> <li>Preheat 15-20 minutes. Increase controller setting.</li> <li>Replace with appropriately rated cord (16 amps).</li> <li>Clean lower porcelain bowl.</li> </ul>
Flare-ups	<ul style="list-style-type: none"> <li>Excess fat in meat.</li> <li>Excessive cooking temperature.</li> <li>Grease build up.</li> </ul>	<ul style="list-style-type: none"> <li>Trim fat from meat before barbecuing.</li> <li>Adjust (lower) temperature as needed.</li> <li>Clean barbecue.</li> </ul>
Controller indicator light is not lit.	<ul style="list-style-type: none"> <li>Normal controller cycling.</li> <li>No power.</li> <li>Faulty controller.</li> </ul>	<ul style="list-style-type: none"> <li>Increase knob setting or wait for light to cycle on.</li> <li>See "barbecue not heating".</li> <li>Replace controller or heating element.</li> </ul>
Persistent grease fire	<ul style="list-style-type: none"> <li>Grease trapped by food build up.</li> </ul>	<ul style="list-style-type: none"> <li>Turn controller knob to the ○ (OFF) position. Keep lid closed and let fire burn out. After barbecue cools, clean the fire bowl.</li> <li>Do not apply water to fire. Personal injury may result.</li> </ul>

**SAVE THESE INSTRUCTIONS**

# REPLACEMENT PARTS LIST

 
Key	Qty	Description
1	1	KIT, TOP LID
2	1	TEMPERATURE GAUGE
3	1	BEZEL, F/ TEMPERATURE GAUGE
4	1	KIT, LOGO PLATE F/ LID
5	1	KIT, HANDLE, F/ LID
6	1	KIT, TOP LID HINGE PINS (SET OF 2)
7	1	KIT, REAR PANEL, TOP LID
8	1	FIREBOWL
9	1	KIT, HEAT SHIELD, F/ FIREBOWL
10	1	KIT, GREASE TRAY SUPPORT
11	1	UPPER REFLECTOR
12	1	VAPORIZER CONE
13	1	KIT, ELEMENT
14	1	POWER CONTROLLER
15	1	LED LIGHT RING
16	1	KIT, CONTROL PANEL
17	1	KIT, BEZEL F/ CONTROL KNOB
18	1	COVER, F/ CONTROLLER
19	1	KIT, BOTTOM SKIRT, CONTROL PANEL
20	1	CONTROL KNOB
21	1	WARMING RACK
22	1	GREASE TRAY
23	1	COOKING GRATE
24	1	EMITTER, F/ COOKING GRATE
25	1	LEFT SIDE SHELF, FIXED
26	2	KIT, FOLDING SHELF
27	1	KIT, FRONT BOTTOM SKIRT, FIXED LEFT SHELF
28	1	KIT, REAR BOTTOM SKIRT, FIXED LEFT SHELF
29	1	KIT, BOTTOM SKIRT, FOLDING LEFT SHELF
<b>NOT Pictured</b>		
...	1	PRODUCT GUIDE, EUROPE
...	1	HARDWARE PACK
...	1	GRATE CLEANING TOOL

Key	Qty	Description
30	2	LIFT HANDLE, SIDE SHELF
31	1	RIGHT SIDE SHELF, FIXED
32	1	KIT, FRONT BOTTOM SKIRT, FIXED RIGHT SHELF
33	1	KIT, REAR BOTTOM SKIRT, FIXED RIGHT SHELF
34	1	KIT, BOTTOM SKIRT, FOLDING RIGHT SHELF
35	1	LEG ASSY, TOP LEFT
36	1	LEG ASSY, TOP RIGHT
37	4	LEG CAP
38	1	LEG SUPPORT WIRE, STRAIGHT
39	1	LEFT LEG ASSEMBLY, FRONT
40	1	LEFT LEG ASSEMBLY, REAR
41	1	RIGHT LEG ASSEMBLY, FRONT
42	1	RIGHT LEG ASSEMBLY, REAR
43	2	CASTER, LOCKING
44	2	CASTER, NON-LOCKING
45	1	FRONT PANEL
46	1	LEFT CAP, FRONT PANEL
47	1	RIGHT CAP, FRONT PANEL
48	1	LEFT PANEL, F/ CART
49	1	RIGHT PANEL, F/ CART
50	1	LEFT CAP, SIDE PANEL
51	1	RIGHT CAP, SIDE PANEL
52	1	CART SUPPORT, CURVED
53	1	BOTTOM SHELF


 






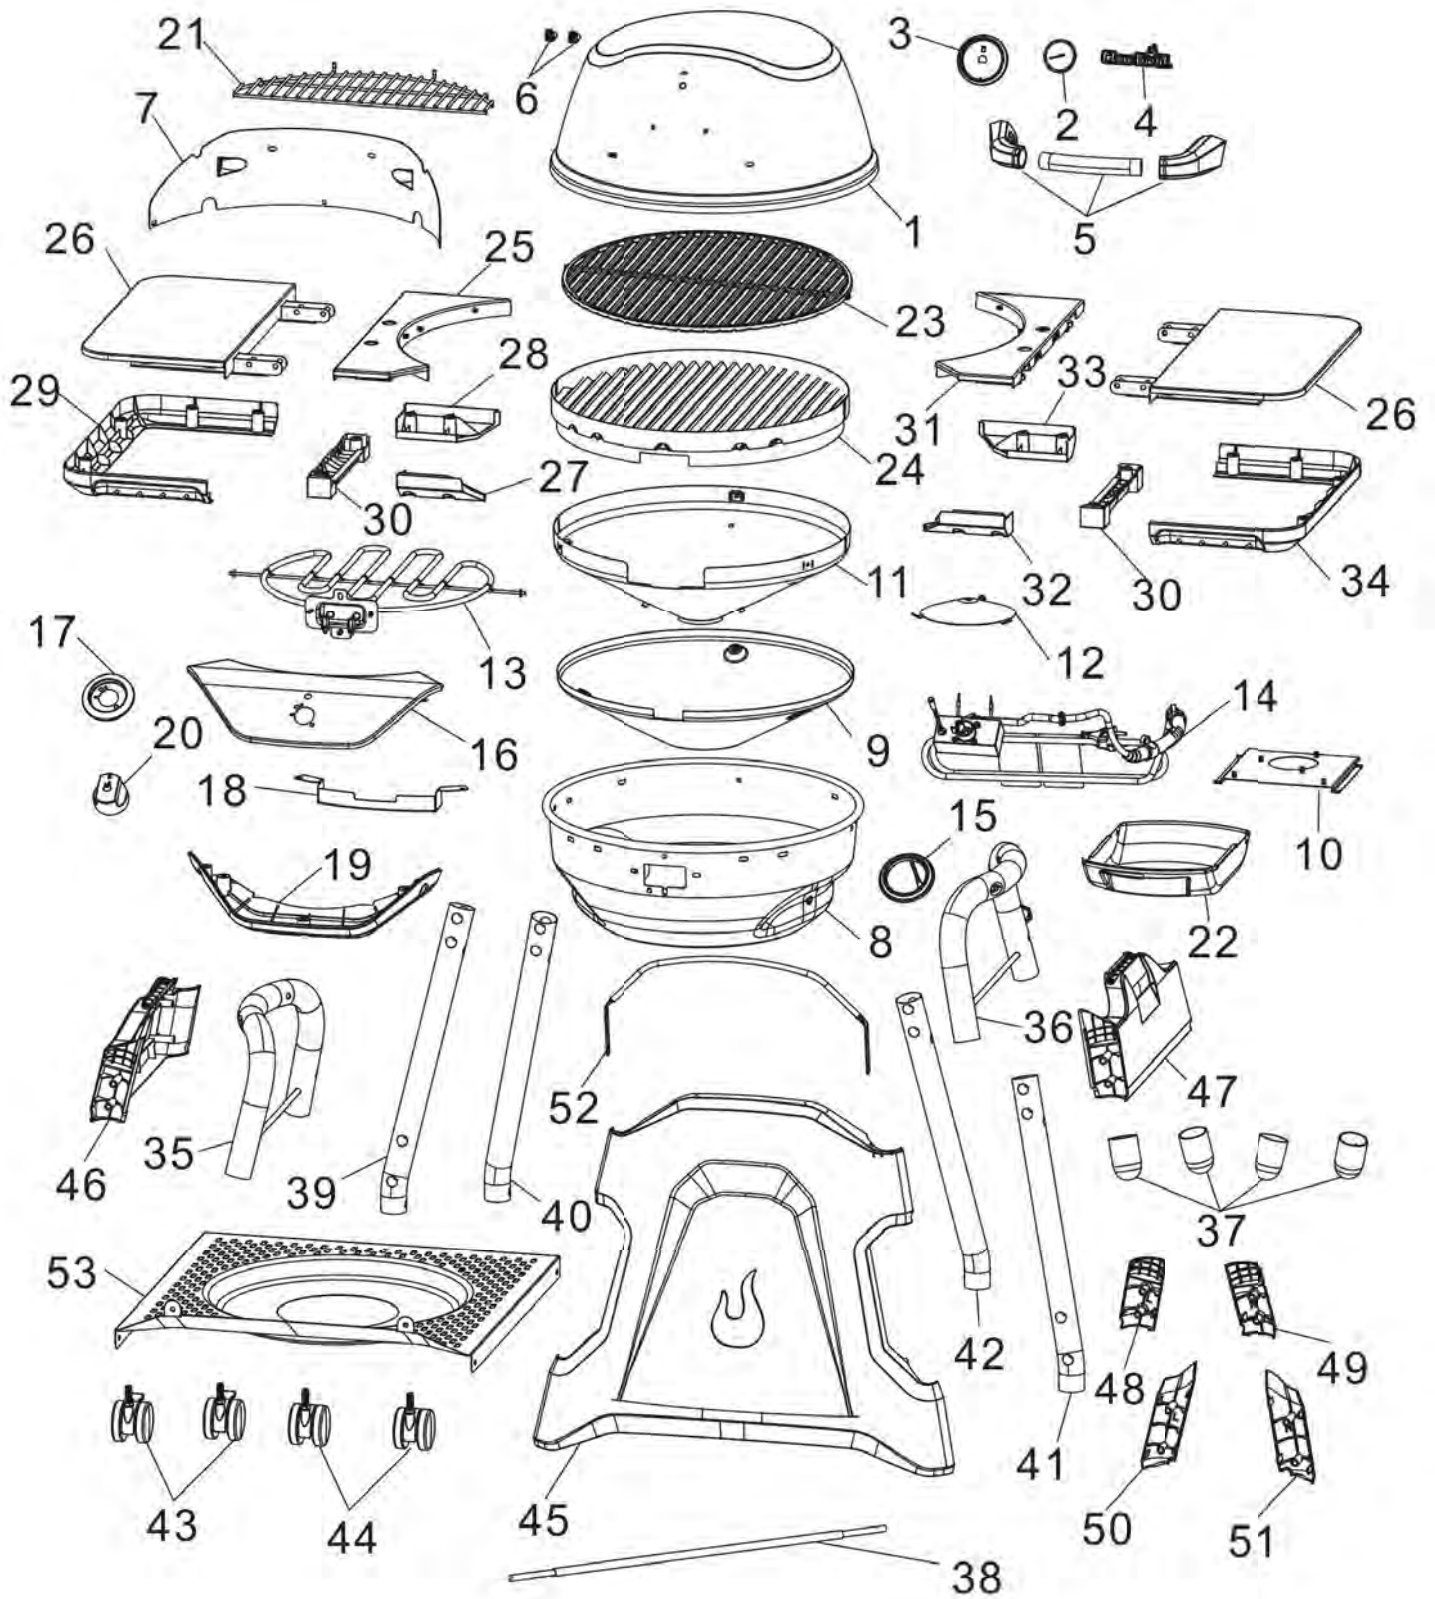

**NOTE:** Some grill parts shown in the assembly steps may differ slightly in appearance from those on your particular grill model. However, the method of assembly remains the same.





# REPLACEMENT PARTS DIAGRAM



  
# HARDWARE

Key	Description	Picture	Qty
A	1/4-20X2" Machine Screw		4
B	1/4-20X1/2" Machine Screw		4
C	#10-24X2 1/8" Machine Screw		8
D	#10-24X1 1/2" Machine Screw		4
E	#10-24X3/8" Machine Screw		7
F	1/4-20X3/8" Shoulder Screw		2
G	#10 Fiber Washer		7
H	#10 Flat Washer		6
I	#10-24 Nut		9
J	1/4-20 Cap Nut		2

**1**

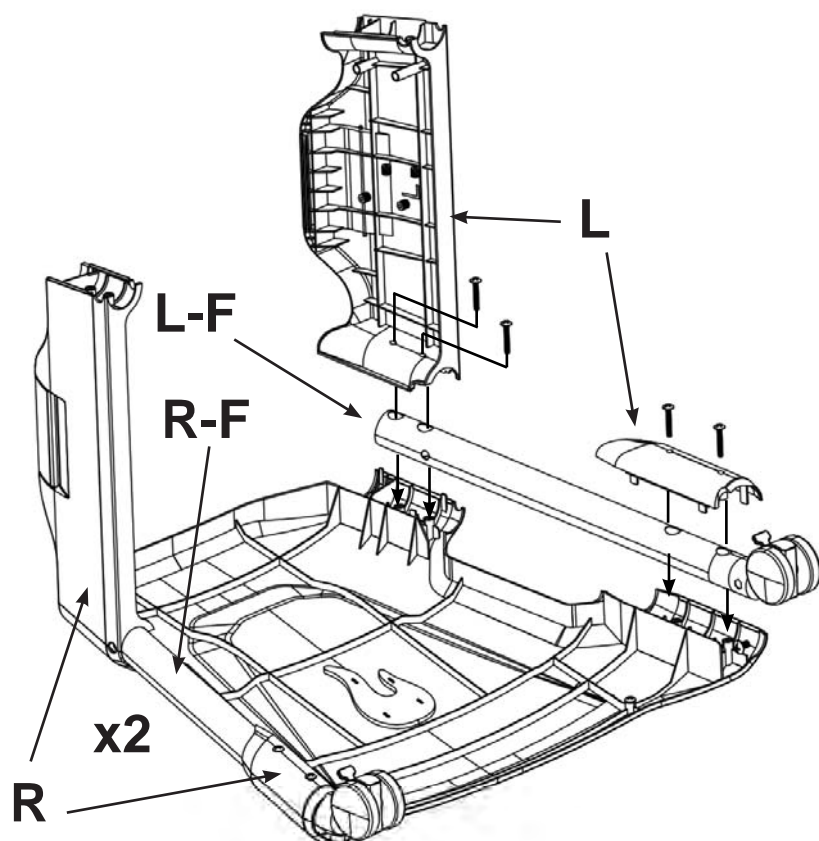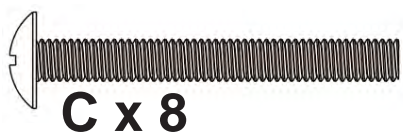


**2**

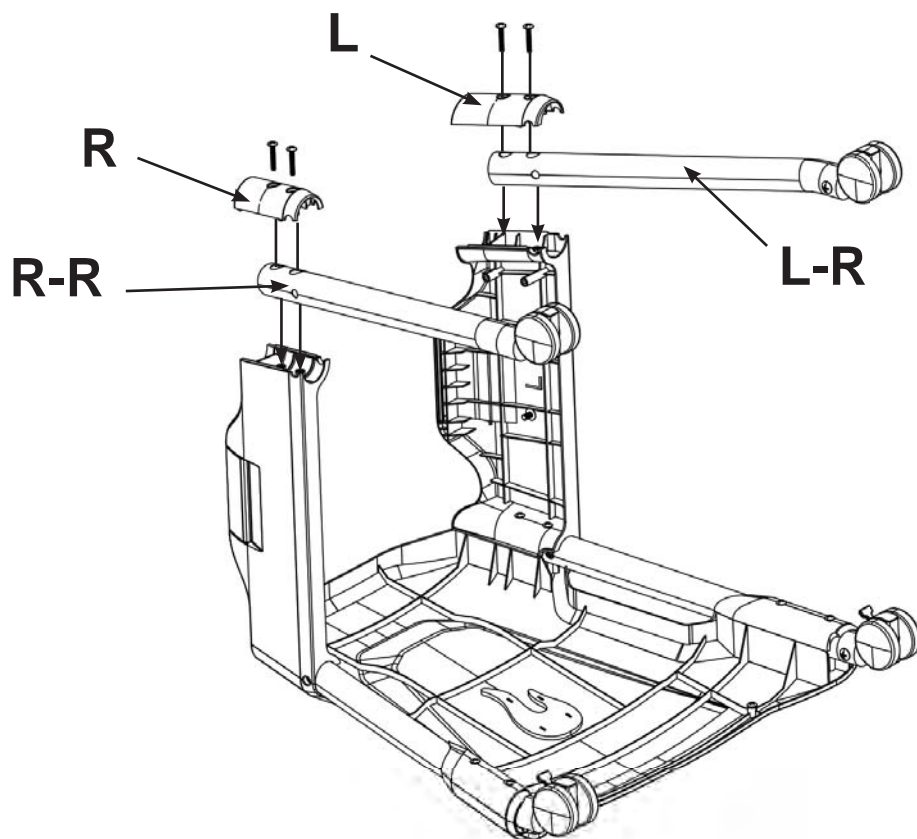 


3



 E x 4

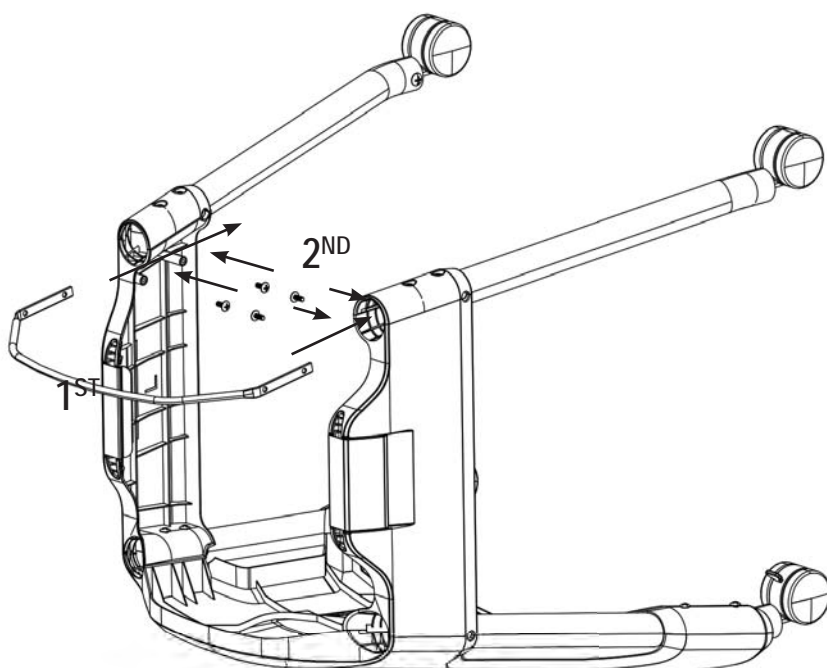


4

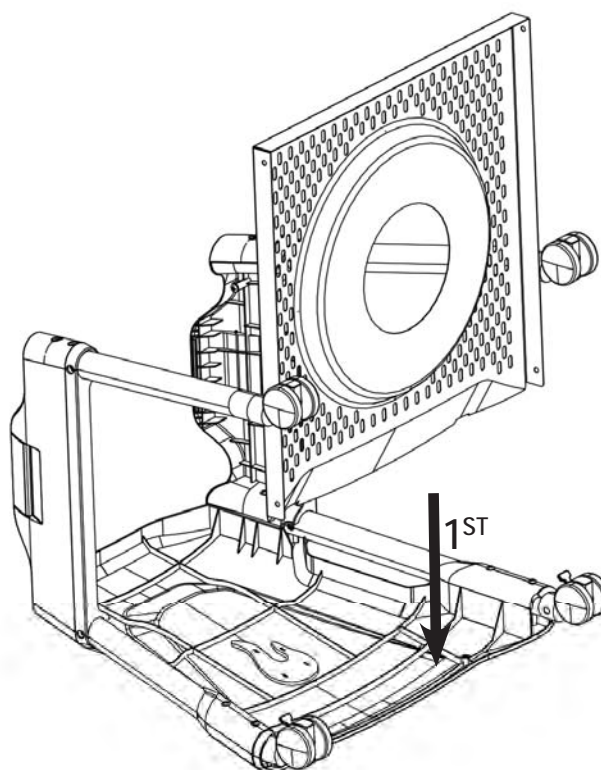 




**5**

 


**B x 4**

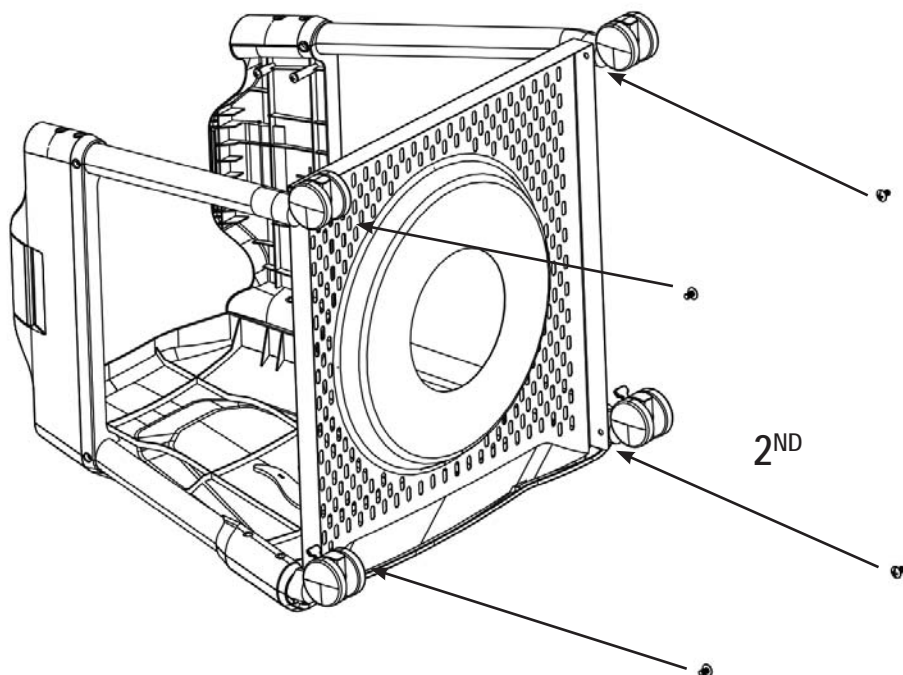 


**6**



 **E x 2**

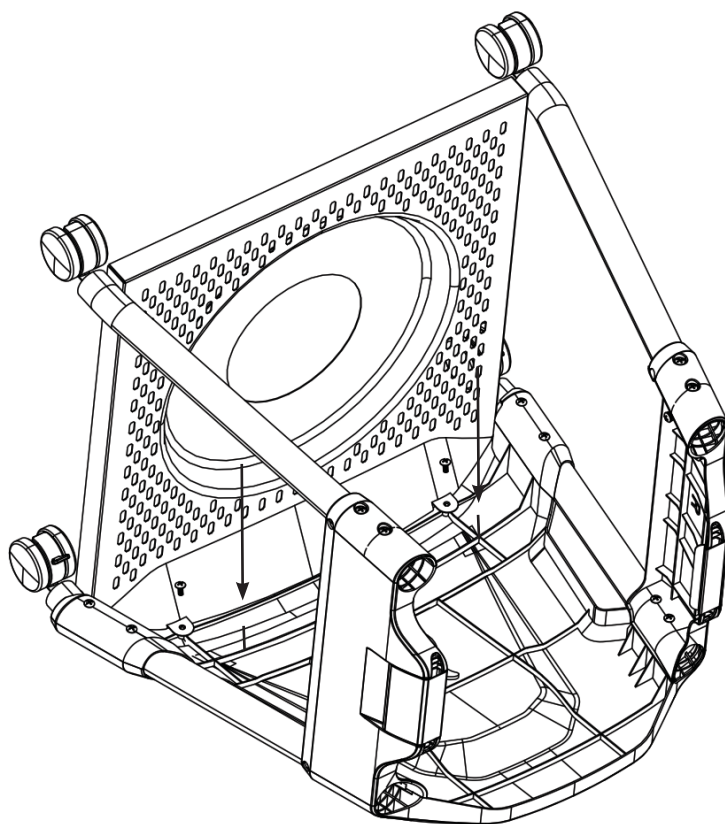

7

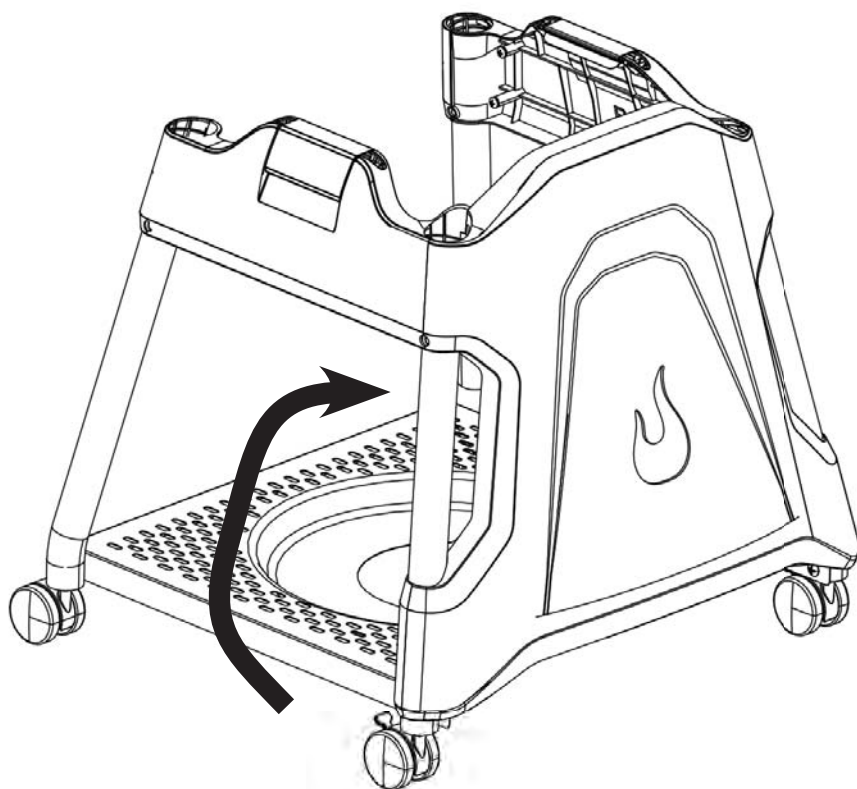 




8



**J x 2**



   **A x 4**

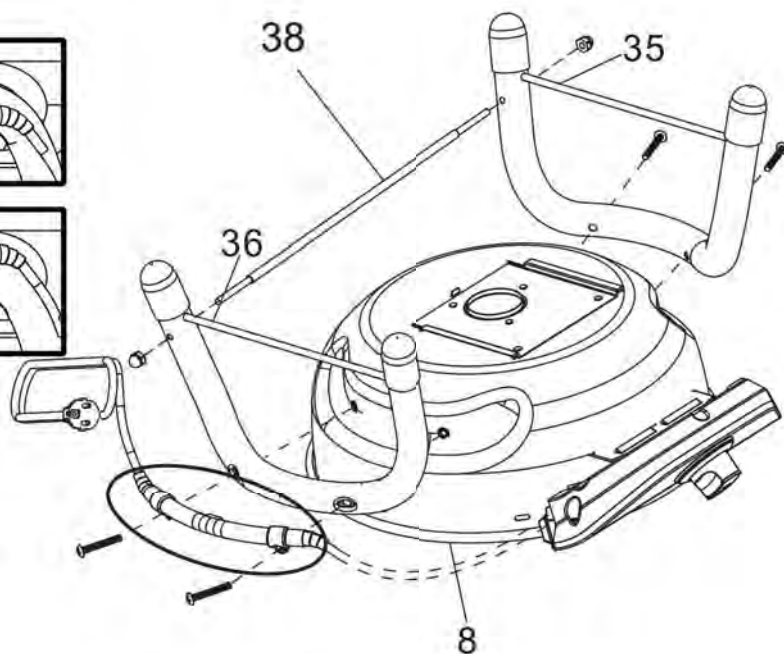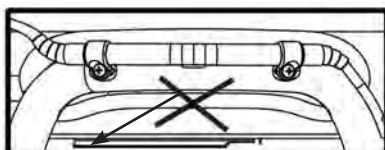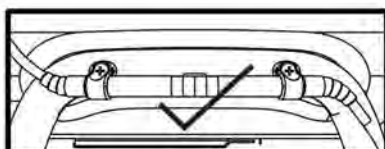


**9**




**H x 6**



 **G x 6**



**I x 6**

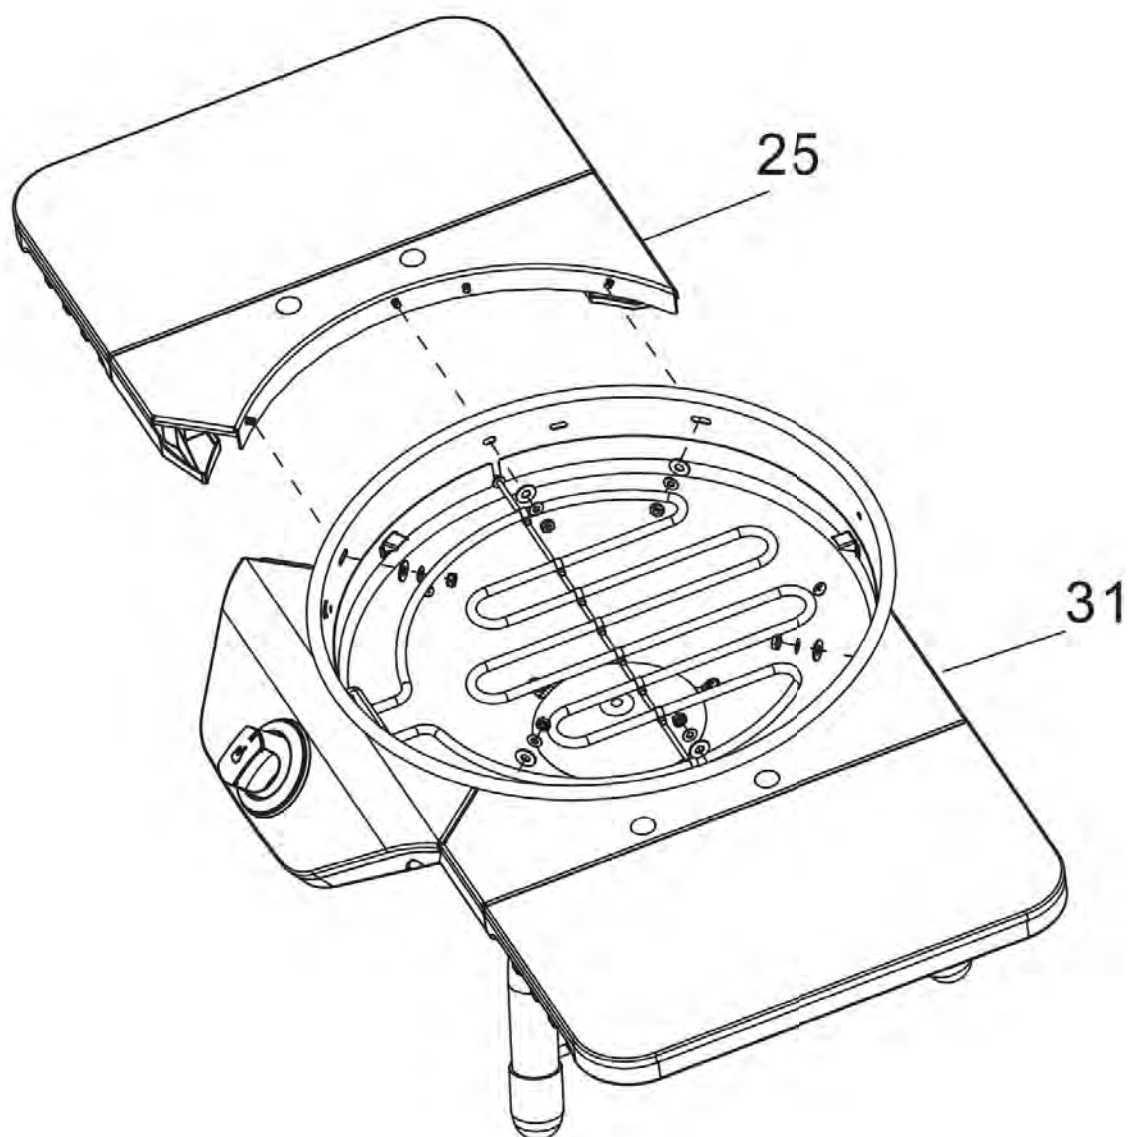 

**10**



 
**G x 1**



**I x 3**




**E x 1**

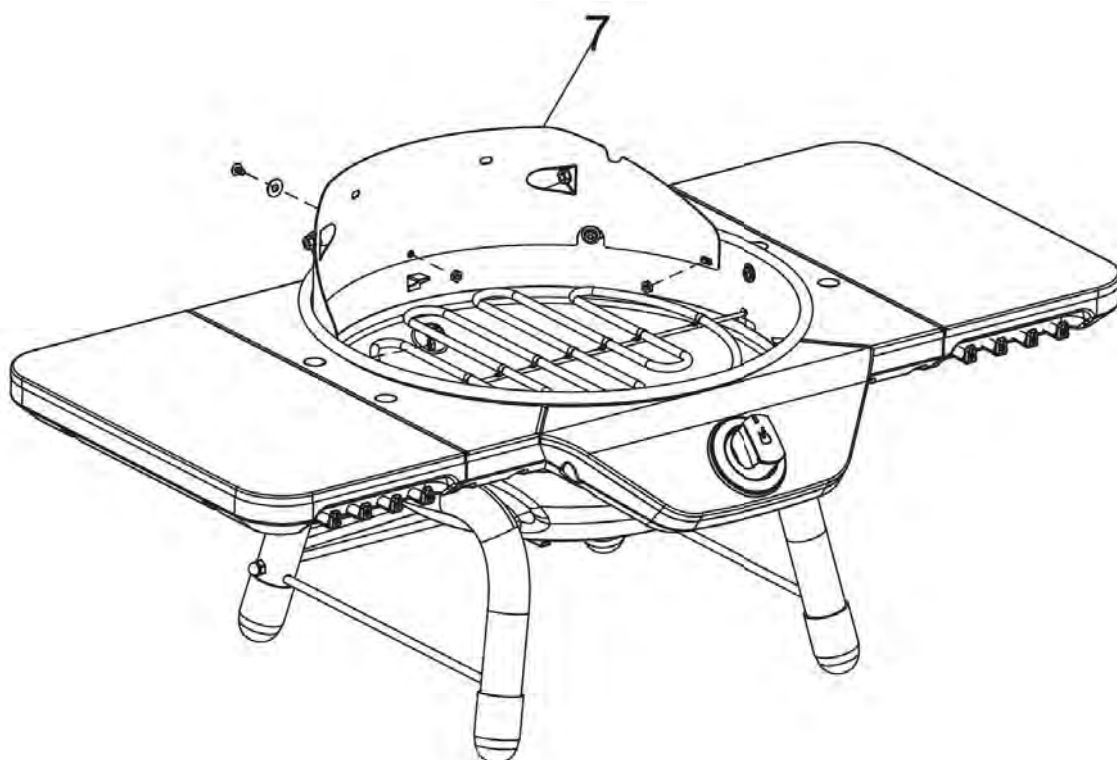

**11**




 **F x 2**

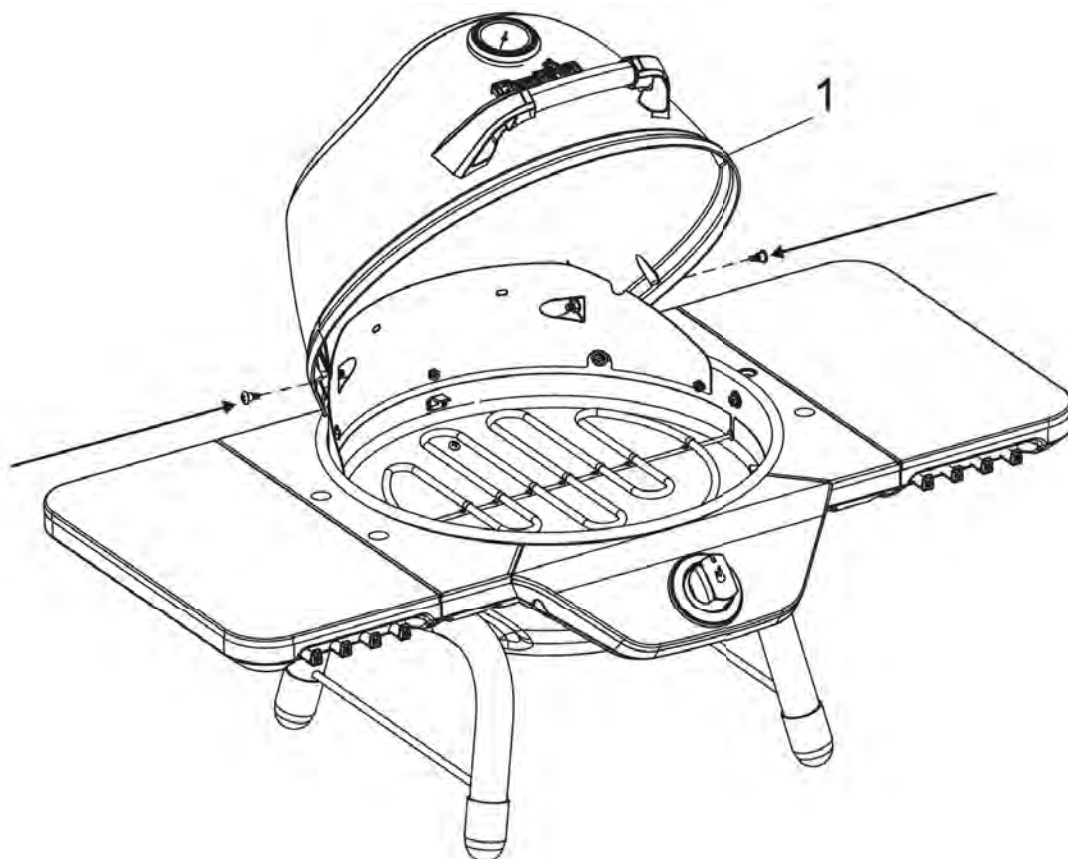





12

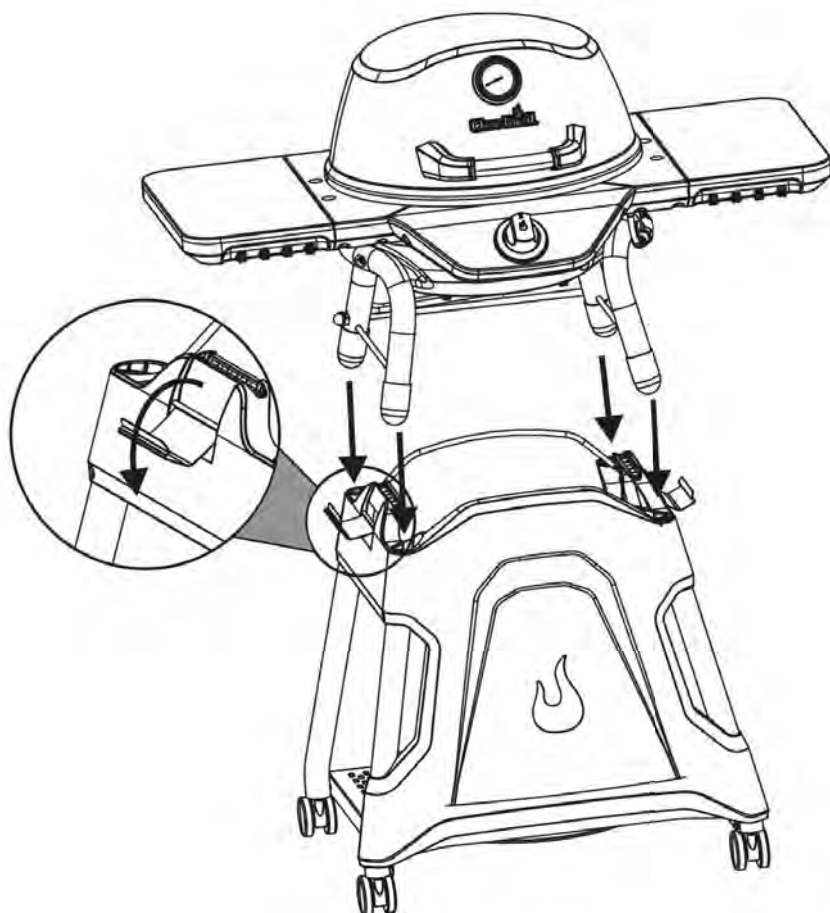 


13

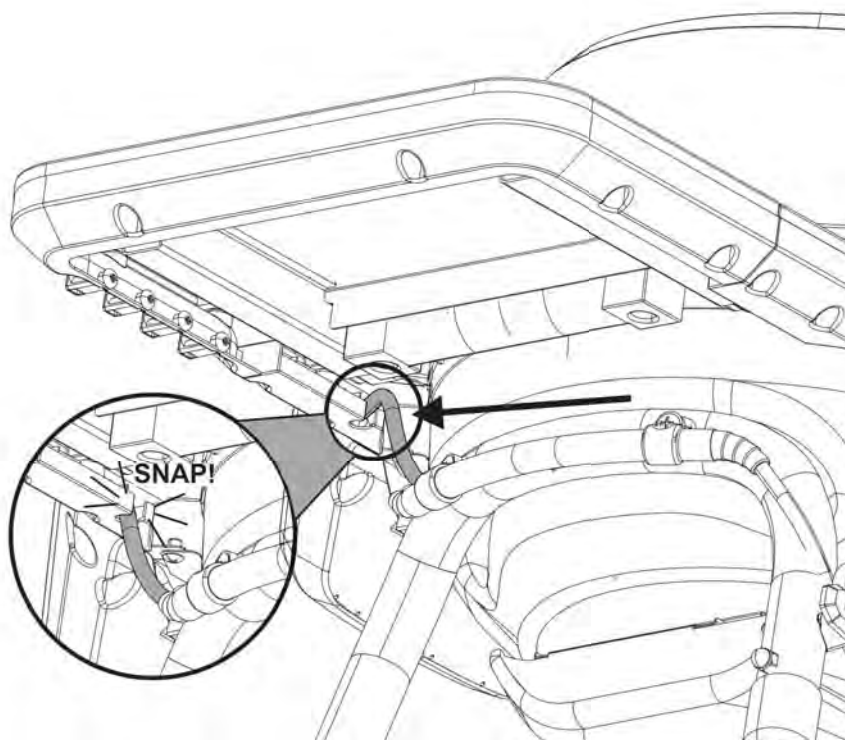 


14

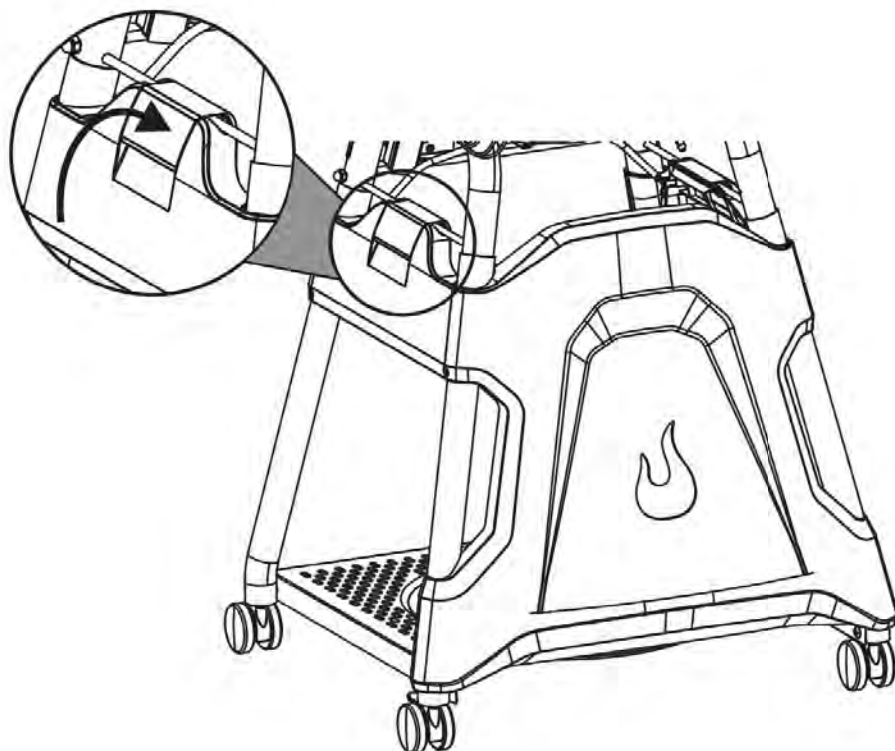 


15

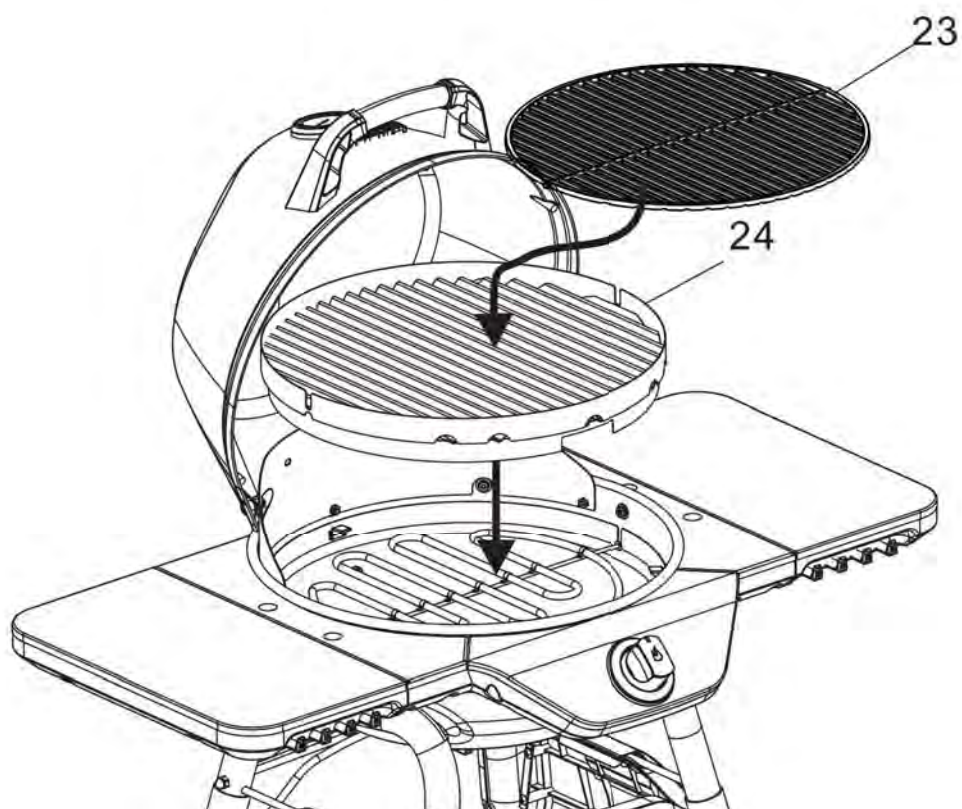 

16

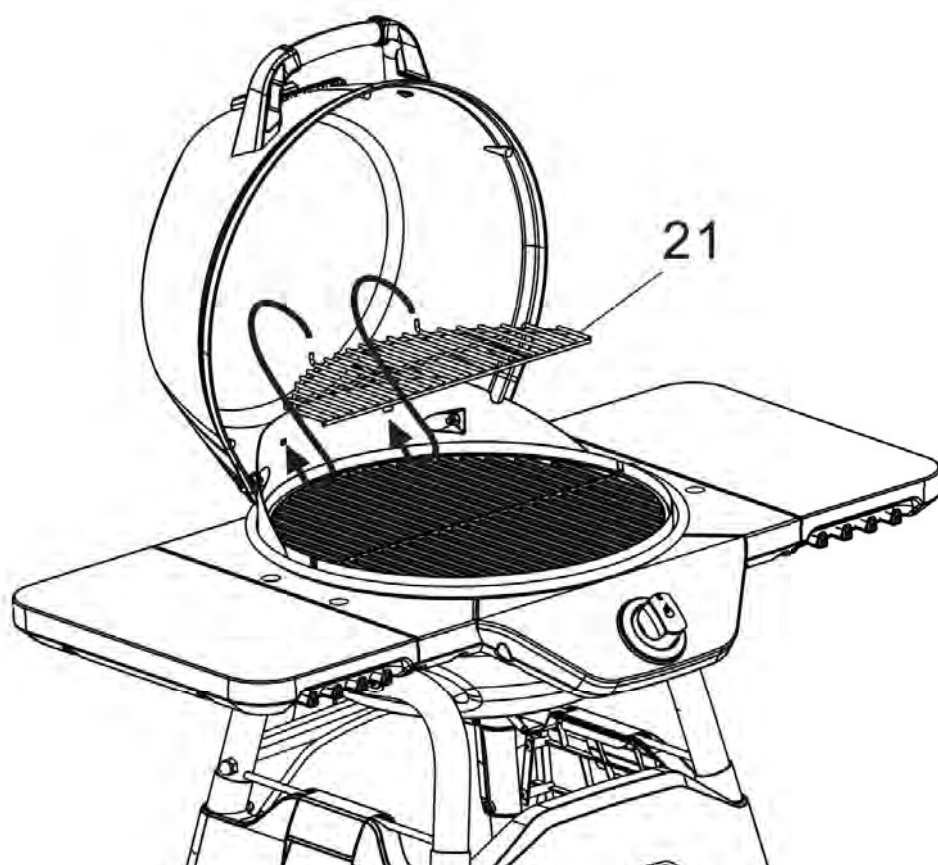 

17

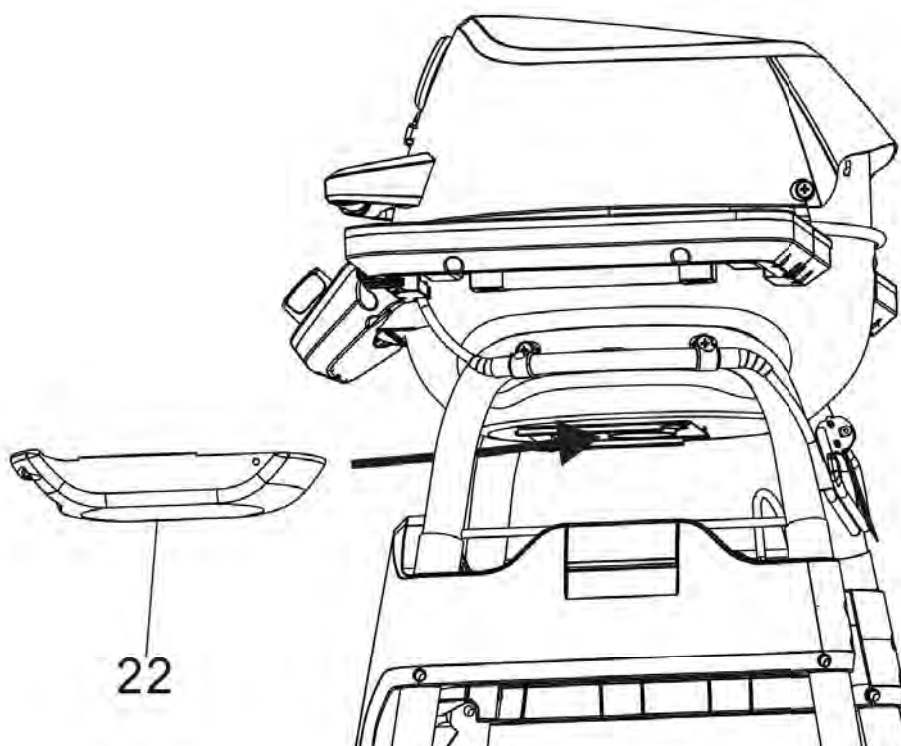 

GB	NOTE: This information is a guide only. Items included in your BBQ specification may differ depending on region or specific dealer specification.	All specifications are subject to change without notice.
RO	NOTĂ: Această informație este doar un ghid. Elementele incluse în specificațiile dvs. pentru grătar pot diferi în funcție de regiune sau de specificațiile dealerului.	Toate specificațiile pot fi modificate fără notificare.



©2018 Char-Broil Europe GmbH Paul-Dessau-Straße 8 Quartier O – 4.OG D-22761 Hamburg

©2018 Assembly instructions.

The product associated with this guide was manufactured in China.

